



CS 301 99

BNT No.	PARTS NAMES	BNT No.	PARTS NAMES	BNT No.	PARTS NAMES
0042	Line Guide Pawl	1851	Drag Washer (C)	1957	Worm Bushing (B)
0133	"E" Lock	1852	Drag Washer (B-2)	1958	Worm Shaft
0191	Clutch Bar Support Screw	1853	Key Washer (A)	1960	Right Side I.D. Plate
0194	Ball Bearing	1854	Eared Washer (B-1)	2050	Clutch Cam Retainer
0425	"E" Lock	1856	Drag Washer (A)	2070	Idle Gear (B)
0664	Spacer B	1917	Handle Assembly	2071	Star Drag
0682	Thumb Rest Screw	1920	Roller Clutch Inner Tube	2072	Left Side Plate Assembly
0686	"E" Lock	1921	Cast Control Cap	2073	Return Pin Guide
0689	Left Side Plate Screw	1922	Cast Control Spacer	2074	Drive Gear
0770	Handle Nut Plate Screw	1923	Left Side Plate Nut	2075	Drive Shaft
0799	Friction Washer	1927	Anti-Reverse Ratchet	2076	Pinion Gear
0816	Shaft Washer	1928	Idle Gear (A)	2077	Yoke
0819	Drive Shaft Bushing	1930	Clutch Cam Screw	2078	Retractor Spring
0830	Spacer (optional)	1937	Line Guide Assembly	2079	Clutch Cam
1133	Yoke Spring	1938	Idle Gear (C)	2080	Clutch Pawl
1201	Retractor Spring Collar	1940	Frame Nut	2081	Clutch Pawl Spring
1227	Push Nut (SPN-2)	1941	Stand Screw	2082	Set Plate
1239	Pawl Cap	1942	Stand Bolt	2083	Clutch Plate
1245	Clutch Bar Support Spacer	1944	Frame Bar	2084	Left Side Frame
1455	Drag Spring Washer (H)	1945	Thumb Rest	2085	Brake Case
1613	Drag Spring Washer (L)	1946	Level Wind Guard	2086	Clutch Bar Guide
1618	Key Washer (C)	1948	Brake Collar	2087	Quick-Fire II Clutch Bar
1620	Eared Washer	1949	Right Side Plate Screw	2088	Right Side Frame
1692	Handle Nut Plate	1951	Stand	2089	Right Side Plate
1697	Spool Tension Spring	1952	Clutch Bar Support	2097	Worm Bushing (A)
1788	Handle Nut	1956	Drain	2100	Spool Assembly