


SHIMANO

CURADO

CU-300DSV

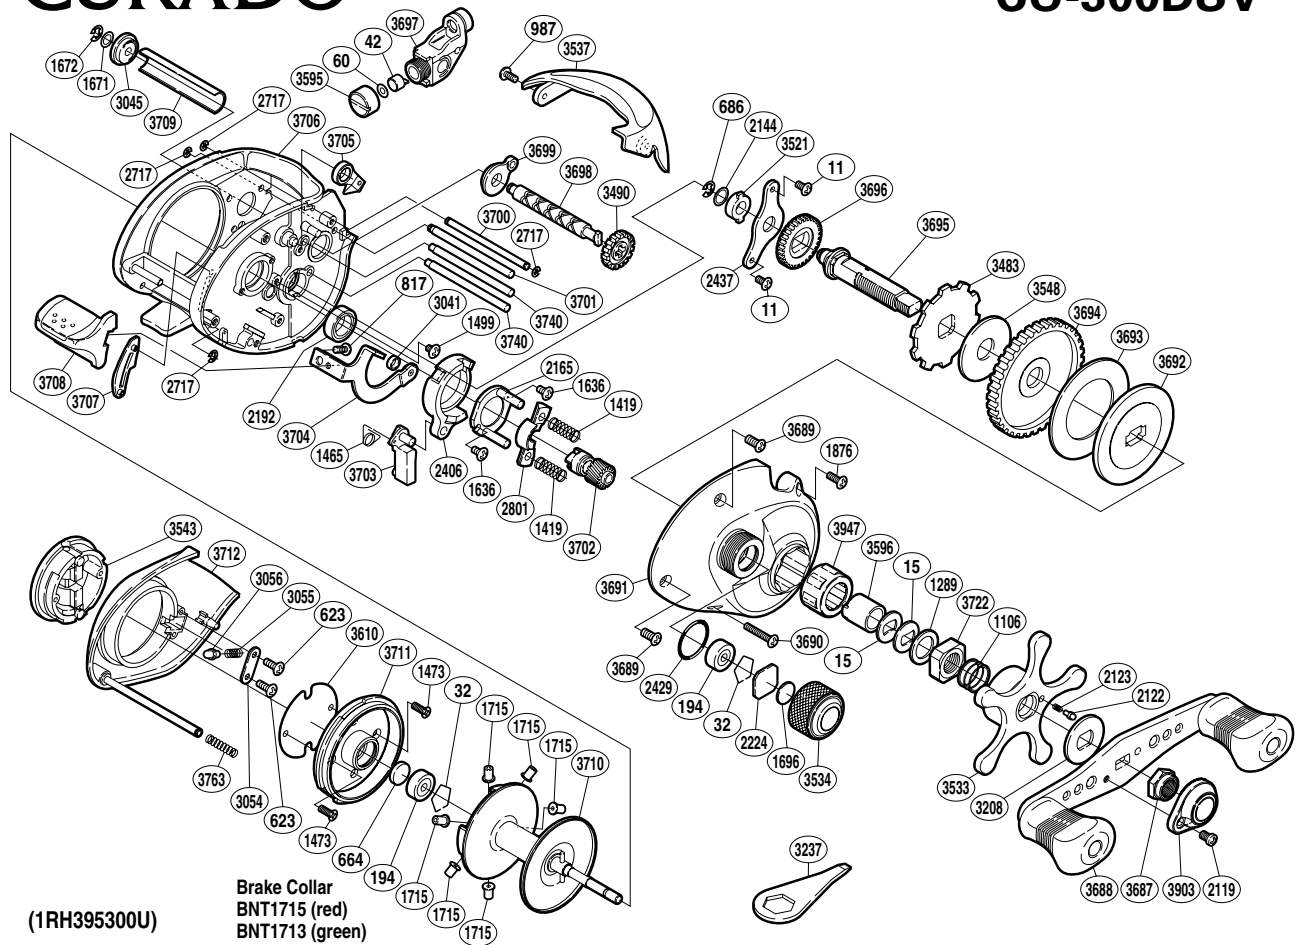

(1RH395300U)

Brake Collar
BNT1715 (red)
BNT1713 (green)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0011	Screw	BNT2224	Spool Tension Spacer	BNT3693	Drag Washer
BNT0015	Drag Spring Washer	BNT2406	Clutch Cam	BNT3694	Drive Gear
BNT0032	Bearing Retainer	BNT2429	O Ring	BNT3695	Drive Shaft
BNT0042	Line Guide Pawl	BNT2437	Drive Shaft Retainer	BNT3696	Idle Gear
BNT0060	Spacer	BNT2717	E Lock	BNT3697	Line Guide
BNT0194	Ball Bearing	BNT2801	Yoke	BNT3698	Worm Shaft
BNT0623	Screw	BNT3041	Clutch Plate Shaft Support	BNT3699	Worm Bushing A
BNT0664	Spacer B	BNT3045	Worm Bushing B	BNT3700	Line Guard
BNT0686	E Lock	BNT3054	Click Pin Retainer	BNT3701	Level Wind Guide
BNT0817	Screw	BNT3055	Click Spring	BNT3702	Pinion Gear
BNT0987	Screw	BNT3056	Click Pin	BNT3703	Clutch Pawl
BNT1106	Star Drag Spring	BNT3208	Star Drag Click Plate	BNT3704	Clutch Plate
BNT1289	Star Drag Spacer	BNT3483	Anti-Reverse Ratchet	BNT3705	Anti-Reverse Pawl
BNT1419	Yoke Spring	BNT3490	Idle Gear	BNT3706	One-Piece Frame
BNT1465	Clutch Pawl Spring	BNT3521	Drive Shaft Bushing	BNT3707	Clutch Bar Guide B
BNT1473	Screw	BNT3533	Star Drag	BNT3708	Quick-Fire II Clutch Bar
BNT1499	Screw	BNT3534	Cast Control Cap	BNT3709	Level Wind Guard
BNT1636	Screw	BNT3537	Thumb Rest	BNT3710	Spool Assembly
BNT1671	Washer	BNT3543	Turnkey Dial	BNT3711	Brake Case
BNT1672	E Lock	BNT3548	Drag Washer	BNT3712	Left Side Plate
BNT1696	Cast Control Spacer	BNT3595	Pawl Cap	BNT3722	Star Drag Nut
BNT1715	Brake Collar (Red)	BNT3596	Roller Clutch Inner Tube	BNT3740	Stabilizer Bar
BNT1876	Screw	BNT3610	Brake Case Spacer	BNT3763	Side Plate Spring
BNT2119	Screw	BNT3687	Handle Nut	BNT3903	Handle Retainer
BNT2122	Click Pin	BNT3688	Handle Assembly	BNT3947	Roller Clutch Bearing
BNT2123	Click Spring	BNT3689	Screw		
BNT2144	Washer	BNT3690	Screw		
BNT2165	Clutch Cam Retainer	BNT3691	Right Side Plate	BNT1713	Brake Collar (green) (accessory)
BNT2192	Ball Bearing	BNT3692	Key Washer	BNT3237	Wrench (accessory)