


# SHIMANO

## CURADO

### CU-301DSV

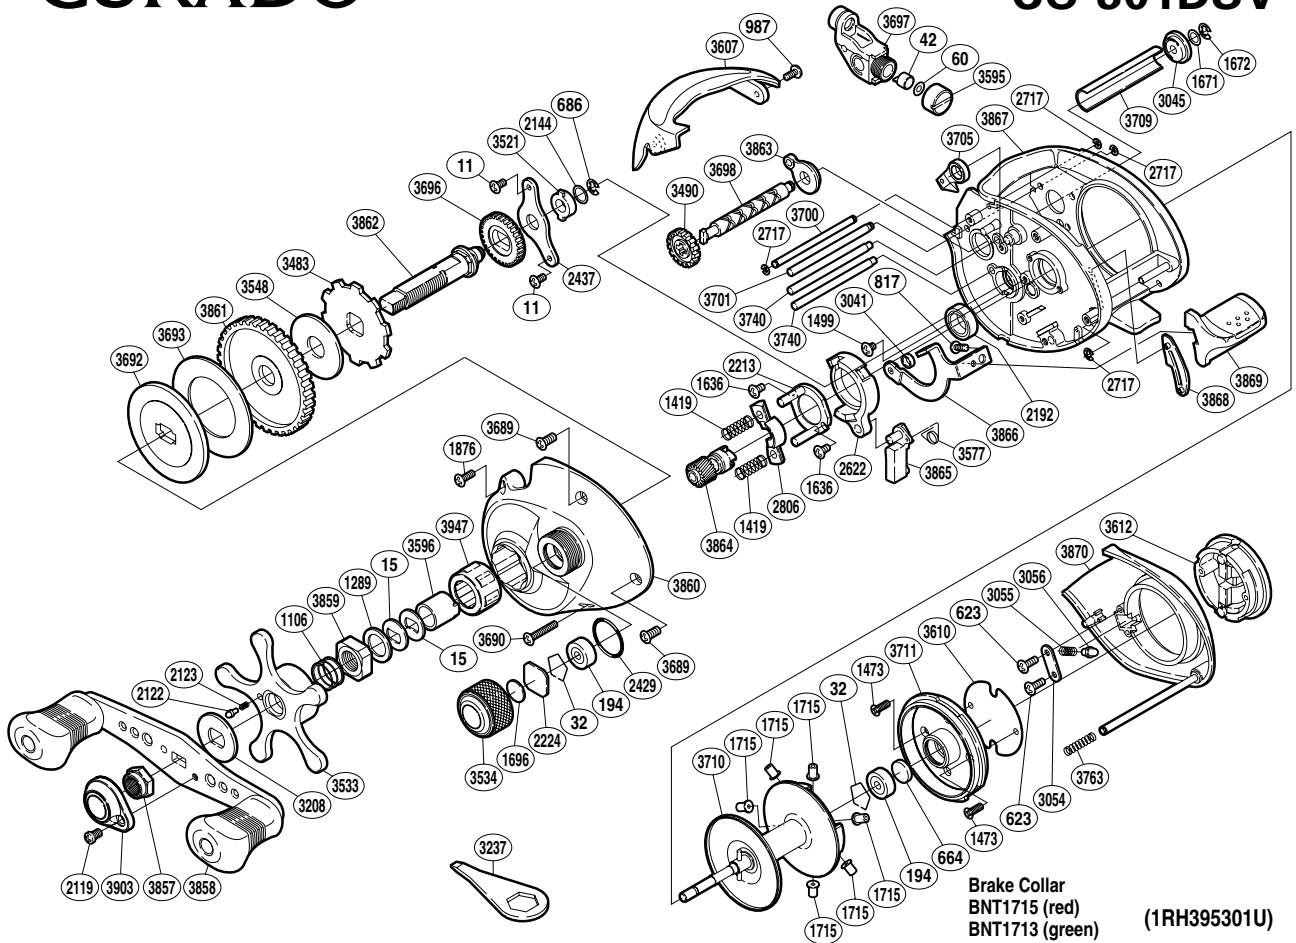

Part No.	Description	Part No.	Description	Part No.	Description
BNT0011	Screw	BNT2429	O Ring	BNT3698	Worm Shaft
BNT0015	Drag Spring Washer	BNT2437	Drive Shaft Retainer	BNT3700	Line Guard
BNT0032	Bearing Retainer	BNT2622	Clutch Cam	BNT3701	Level Wind Guide
BNT0042	Line Guide Pawl	BNT2717	E Lock	BNT3705	Anti-Reverse Pawl
BNT0060	Spacer	BNT2806	Yoke	BNT3709	Level Wind Guard
BNT0194	Ball Bearing	BNT3041	Clutch Plate Shaft Support	BNT3710	Spool Assembly
BNT0623	Screw	BNT3045	Worm Bushing B	BNT3711	Brake Case
BNT0664	Spacer B	BNT3054	Click Pin Retainer	BNT3740	Stabilizer Bar
BNT0686	E Lock	BNT3055	Click Spring	BNT3763	Side Plate Spring
BNT0817	Screw	BNT3056	Click Pin	BNT3857	Handle Nut
BNT0987	Screw	BNT3208	Star Drag Click Plate	BNT3858	Handle Assembly
BNT1106	Star Drag Spring	BNT3483	Anti-Reverse Ratchet	BNT3859	Star Drag Nut
BNT1289	Star Drag Spacer	BNT3490	Idle Gear	BNT3860	Left Side Plate
BNT1419	Yoke Spring	BNT3521	Drive Shaft Bushing	BNT3861	Drive Gear
BNT1473	Screw	BNT3533	Star Drag	BNT3862	Drive Shaft
BNT1499	Screw	BNT3534	Cast Control Cap	BNT3863	Worm Bushing A
BNT1636	Screw	BNT3548	Drag Washer	BNT3864	Pinion Gear
BNT1671	Washer	BNT3577	Clutch Pawl Spring	BNT3865	Clutch Pawl
BNT1672	E Lock	BNT3595	Pawl Cap	BNT3866	Clutch Plate
BNT1696	Cast Control Spacer	BNT3596	Roller Clutch Inner Tube	BNT3867	One-Piece Frame
BNT1715	Brake Collar (red)	BNT3607	Thumb Rest	BNT3868	Clutch Bar Guide B
BNT1876	Screw	BNT3610	Brake Case Spacer	BNT3869	Quick-Fire II Clutch Bar
BNT2119	Screw	BNT3612	Turnkey Dial	BNT3870	Right Side Plate
BNT2122	Click Pin	BNT3689	Screw	BNT3903	Handle Retainer
BNT2123	Click Spring	BNT3690	Screw	BNT3947	Roller Clutch Bearing
BNT2144	Washer	BNT3692	Key Washer		
BNT2192	Ball Bearing	BNT3693	Drag Washer		
BNT2213	Clutch Cam Retainer	BNT3696	Idle Gear	BNT1713	Brake Collar (green) (accessory)
BNT2224	Spool Tension Spacer	BNT3697	Line Guide	BNT3237	Wrench (accessory)