


# NEXAVE

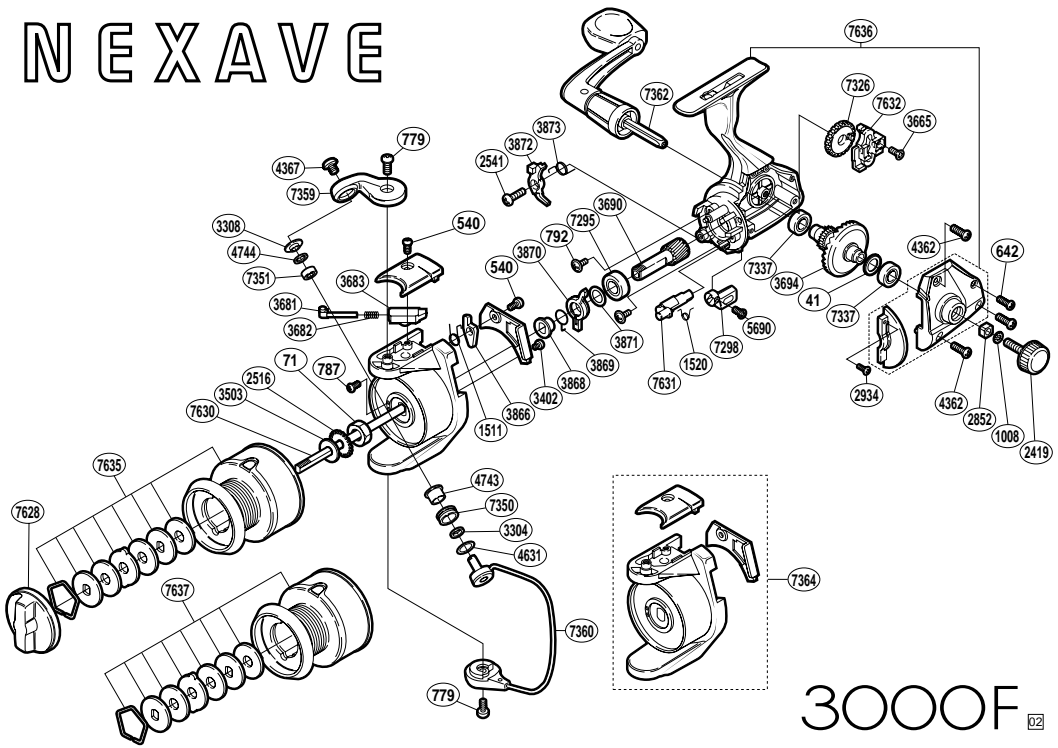

## 3000F 02

'02 NEX 3000F

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0041	Drive Gear Washer	3665	Slider Retainer Screw	7295	Ball Bearing
0071	Rotor Nut	3681	Bail Spring Guide (A)	7298	Anti-Reverse Lever
0540	Multi-Purpose Screw	3682	Bail Spring	7326	Oscillating Gear
0642	Side Cover Screw (small)	3683	Bail Spring Guide (B)	7337	Ball Bearing
0779	Multi-Purpose Screw	3690	Pinion Gear	7350	Line Roller
0787	Nut Lock Screw	3694	Drive Gear	7351	Line Roller Bearing
0792	Bearing Retainer Screw	3866	Bail Trip Lever	7359	Bail Arm
1008	Handle Lock Washer	3868	Lock Out Spring Holder	7360	Bail Assembly
1511	Lever Spring	3869	Anti-Reverse Lock Out Spring	7362	Handle Assembly
1520	Anti-Reverse Cam Spring	3870	Anti-Reverse Lock Out	7364	Rotor Assembly
2419	Handle Screw Cap	3871	Bushing Washer	7628	Drag Knob Assembly
2516	Spool Support	3872	Anti-Reverse Pawl	7630	Main Shaft
2541	Anti-Reverse Pawl Screw	3873	Anti-Reverse Pawl Spring	7631	Anti-Reverse Cam
2852	Handle Screw Lock	4362	Side Cover Screw (large)	7632	Oscillating Slider
2934	Flange Screw	4367	Line Roller Screw	7635	Spool Assembly
3304	Bearing Spacer	4631	Spacer	7636	Body Assembly
3308	Line Roller Washer	4743	Line Roller Bushing		
3402	Cover Screw	4744	Roller Bearing Seal		
3503	Spool Washer	5690	Anti-Reverse Lever Screw	7637	Spare Spool Assembly