


# NEXAVE 2000R

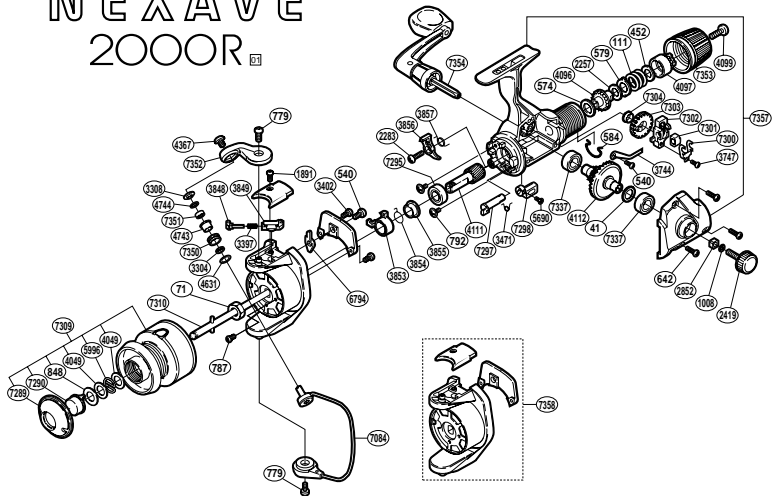

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0041	Drive Gear Washer	3471	Anti-Reverse Cam Spring	7084	Bail Assembly
0071	Rotor Nut	3744	Drag Click	7289	Push Button Collar
0111	Drag Coil Spring	3747	Slider Retainer Screw	7290	Push Button
0452	Drag Spring Washer	3848	Bail Spring Guide (A)	7295	Ball Bearing
0540	Multi-Purpose Screw	3849	Bail Spring Guide (B)	7297	Anti-Reverse Cam
0574	Drag Washer "C" (cloth)	3853	Anti-Reverse Lock Out	7298	Anti-Reverse Lever
0579	Eared Washer "B"	3854	Anti-Reverse Lock Out Spring	7300	Oscillating Slider Retainer
0584	Hold Click Spring	3855	Lock Out Spring Holder	7301	Oscillating Slider Inner
0642	Side Cover Screw	3856	Anti-Reverse Pawl	7302	Oscillating Slider
0779	Multi-Purpose Screw	3857	Anti-Reverse Pawl Spring	7303	Oscillating Gear
0787	Nut Lock Screw	4049	Large Hole Washer	7304	Oscillating Gear Bushing
0792	Bearing Retainer Screw	4096	Drag Shaft	7309	Spool Assembly
0848	Small Hole Washer	4097	Pressure Screw	7310	Main Shaft
1008	Handle Lock Washer	4099	Drag Knob Screw	7337	Ball Bearing
1891	Bail Spring Cover Screw	4111	Pinion Gear	7350	Line Roller
2257	Drag Washer "H" (blue)	4112	Drive Gear	7351	Line Roller Bearing
2283	Anti-Reverse Pawl Screw	4367	Line Roller Screw	7352	Bail Arm
2419	Handle Screw Cap	4631	Spacer	7353	Drag Knob
2852	Handle Screw Lock	4743	Line Roller Bushing	7354	Handle Assembly
3304	Bearing Spacer	4744	Roller Bearing Seal	7357	Body Set
3308	Line Roller Washer	5690	Anti-Reverse Lever Screw	7358	Rotor Assembly
3397	Bail Spring	5996	Locking Spring		
3402	Cover Screw	6794	Bail Trip Lever		