



1000FE 97

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0041	Drive Gear Washer	4638	Line Roller Washer	4792	Bail Arm
0787	Worm Shaft Retainer Screw	4639	Bail Spring Guide (A)	4793	Bail Spring Cover
0930	Ball Bearing	4640	Bail Spring	4794	Bail Hold Support Guard
1008	Handle Lock Washer	4641	Bail Spring Guide (B)	4795	Bail Hold Support Spacer
1520	Anti-Reverse Cam Spring	4643	Bail Arm Bushing	4797	Rotor
1891	Multi-Purpose Screw	4649	Spacer	4798	Roller Clutch Screw
2254	Ball Bearing	4650	Bail Hold Support Shaft	4799	Pinion Gear
2298	Spacer	4652	Lever Spring Guide (B)	4800	Anti-Reverse Cam
2404	"E" Lock	4653	Lever Spring	4801	Worm Bushing (front)
2715	Rotor Nut	4654	Lever Spring Guide (A)	4802	Worm Shaft
2852	Handle Screw Lock	4655	Bail Trip Lever	4803	Worm Shaft Spacer
3061	Side Cover Screw	4656	Trip Lever Spacer	4804	Worm Bushing (rear)
3304	Bearing Spacer	4658	Clutch Cover Screw	4805	Side Cover Flange
3306	Line Roller Bearing	4659	Roller Clutch Assembly	4806	Side Cover
3309	Line Roller Screw	4661	Anti-Reverse Cam Ring	4807	Body
3366	Anti-Reverse Lever Screw	4665	Idle Gear	4808	Oscillating Guide
3391	Drag Knob	4667	Drive Gear	4809	Worm Shaft Retainer
3402	Bail Spring Cover Screw (small)	4675	Oscillating Pawl Cover Screw	4810	Rear Protector Screw
3455	Spool Washer	4676	Oscillating Pawl Cover	4811	Rear Cover
3481	Bushing	4677	Oscillating Slider Bushing	4812	Rear Cover Screw (small)
4421	Handle Screw Cap	4678	Oscillating Pawl	4813	Rear Protector
4469	Double Paddle Handle Assembly	4679	Oscillating Slider	4814	Anti-Reverse Lever
4634	Spool Support	4680	Slider Retainer Screw	5350	Line Roller
4636	Line Roller Bushing	4790	Spool Assembly	5355	Bail Assembly
4637	Line Roller Spacer	4791	Main Shaft	5541	Bail Arm Screw