



## 2000FE 97

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0041	Drive Gear Washer	4639	Bail Spring Guide (A)	4794	Bail Hold Support Guard
0787	Worm Shaft Retainer Screw	4640	Bail Spring	4795	Bail Hold Support Spacer
0930	Ball Bearing	4641	Bail Spring Guide (B)	4798	Roller Clutch Screw
1008	Handle Lock Washer	4643	Bail Arm Bushing	4799	Pinion Gear
1520	Anti-Reverse Cam Spring	4649	Spacer	4800	Anti-Reverse Cam
1891	Multi-Purpose Screw	4650	Bail Hold Support Shaft	4801	Worm Bushing (front)
2254	Ball Bearing	4652	Lever Spring Guide (B)	4803	Worm Shaft Spacer
2298	Spacer	4653	Lever Spring	4804	Worm Bushing (rear)
2404	"E" Lock	4654	Lever Spring Guide (A)	4805	Side Cover Flange
2715	Rotor Nut	4656	Trip Lever Spacer	4806	Side Cover
2852	Handle Screw Lock	4658	Clutch Cover Screw	4807	Body
3061	Side Cover Screw	4659	Roller Clutch Assembly	4808	Oscillating Guide
3304	Bearing Spacer	4661	Anti-Reverse Cam Ring	4809	Worm Shaft Retainer
3306	Line Roller Bearing	4665	Idle Gear	4810	Rear Protector Screw
3309	Line Roller Screw	4667	Drive Gear	4812	Rear Cover Screw (small)
3366	Anti-Reverse Lever Screw	4675	Oscillating Pawl Cover Screw	4813	Rear Protector
3391	Drag Knob	4676	Oscillating Pawl Cover	4814	Anti-Reverse Lever
3402	Bail Spring Cover Screw (small)	4677	Oscillating Slider Bushing	4815	Spool Assembly
3455	Spool Washer	4678	Oscillating Pawl	4816	Bail Spring Cover
3481	Bushing	4679	Oscillating Slider	4818	Rotor
4421	Handle Screw Cap	4680	Slider Retainer Screw	4819	Worm Shaft
4634	Spool Support	4687	Handle Assembly	4820	Rear Cover
4636	Line Roller Bushing	4692	Bail Trip Lever	5350	Line Roller
4637	Line Roller Spacer	4791	Main Shaft	5356	Bail Assembly
4638	Line Roller Washer	4792	Bail Arm	5541	Bail Arm Screw