



3000FE 97

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	4637	Line Roller Spacer	4829	Roller Clutch Screw
0041	Drive Gear Washer	4638	Line Roller Washer	4830	Pinion Gear
0071	Rotor Nut	4649	Spacer	4831	Ball Bearing
0787	Multi-Purpose Screw	4650	Bail Hold Support Shaft	4832	Anti-Reverse Cam
0930	Ball Bearing	4652	Lever Spring Guide (B)	4833	Worm Bushing (front)
1008	Handle Lock Washer	4653	Lever Spring	4834	Idle Gear
1506	Clutch Cover Screw	4654	Lever Spring Guide (A)	4835	Worm Shaft
1520	Anti-Reverse Cam Spring	4656	Trip Lever Spacer	4836	Worm Bushing (rear)
1891	Multi-Purpose Screw	4661	Anti-Reverse Cam Ring	4837	Side Cover Flange
2298	Spacer	4675	Oscillating Pawl Cover Screw	4838	Drive Gear Bushing
2309	Slider Retainer Screw	4677	Oscillating Slider Bushing	4839	Drive Gear
2362	Spool Support	4678	Oscillating Pawl	4840	Side Cover
2404	"E" Lock	4698	Bail Spring Guide (A)	4841	Body
2852	Handle Screw Lock	4699	Bail Spring	4842	Oscillating Guide (A)
3081	Side Cover Screw	4700	Bail Spring Guide (B)	4843	Oscillating Guide (B)
3304	Bearing Spacer	4702	Bail Arm Bushing	4844	Worm Shaft Retainer
3306	Line Roller Bearing	4704	Bail Spring Cover Screw (large)	4846	Rear Protector
3309	Line Roller Screw	4714	Roller Clutch Assembly	4972	Bail Trip Lever
3366	Anti-Reverse Lever Screw	4733	Oscillating Pawl Cover	4992	Spool Assembly
3402	Bail Spring Cover Screw (small)	4734	Oscillating Slider	4993	Bail Spring Cover
3414	Drag Knob	4803	Worm Shaft Spacer	4994	Bail Hold Support Guard
3468	Rear Cover Screw (short)	4810	Rear Protector Screw	4996	Rotor
3503	Spool Washer	4814	Anti-Reverse Lever	4997	Rear Cover
4421	Handle Screw Cap	4822	Main Shaft	5350	Line Roller
4470	Double Paddle Handle Assembly	4823	Bail Arm	5362	Bail Assembly
4636	Line Roller Bushing	4826	Bail Hold Support Spacer	5542	Bail Arm Screw