


STRADIC

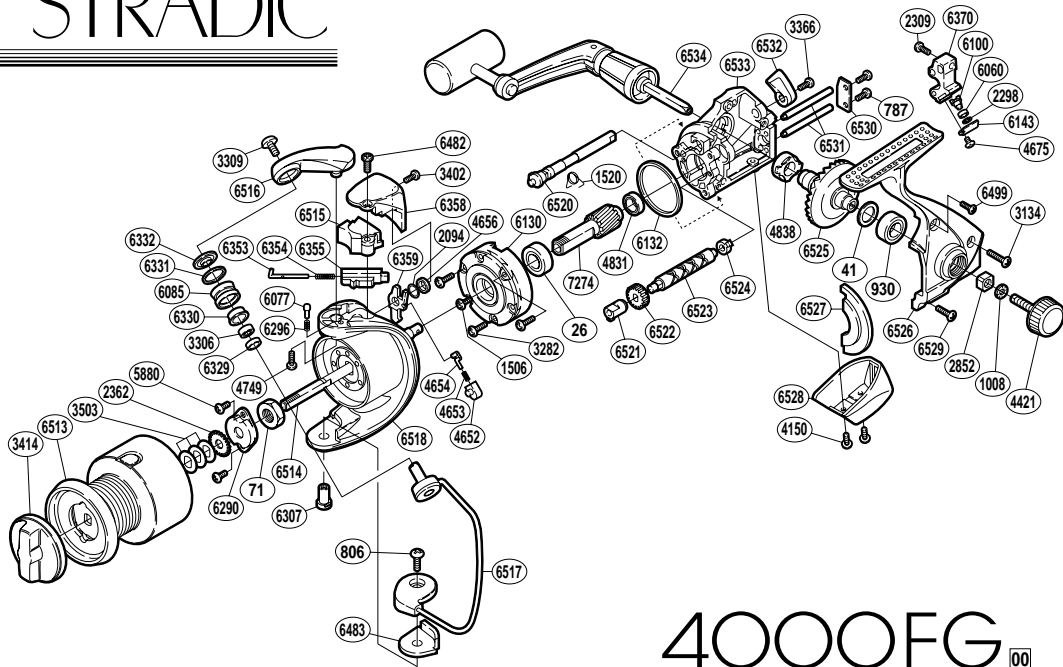

4000FG 00

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	4654	Lever Spring Guide (A)	6370	Oscillating Slider
0041	Drive Gear Washer	4656	Trip Lever Spacer	6482	Protector Screw (large)
0071	Rotor Nut	4675	Oscillating Pawl Cover Screw	6483	Bail Hold Support Spacer
0787	Worm Shaft Retainer Screw	4749	Bail Arm Screw	6499	Side Cover Screw (small)
0806	Bail Hold Support Screw	4831	Ball Bearing	6513	Spool Assembly
0930	Ball Bearing	4838	Drive Gear Bushing	6514	Main Shaft
1008	Handle Lock Washer	5880	Nut Lock Screw	6515	Bail Spring Cover
1506	Clutch Cover Screw	6060	Oscillating Slider Bushing	6516	Bail Arm
1520	Anti-Reverse Cam Spring	6077	Click Pin	6517	Bail Assembly
2094	Spacer	6085	Line Roller	6518	Rotor
2298	Spacer	6100	Oscillating Pawl	6520	Anti-Reverse Cam
2309	Slider Retainer Screw	6130	Roller Clutch Assembly	6521	Worm Bushing (front)
2362	Spool Support	6132	Friction Ring	6522	Idle Gear
2852	Handle Screw Lock	6143	Oscillating Pawl Cover	6523	Worm Shaft
3134	Side Cover Screw (long)	6290	Rotor Nut Lock Plate	6524	Worm Bushing (rear)
3282	Roller Clutch Screw	6296	Click Spring	6525	Drive Gear
3306	Ball Bearing	6307	Bail Hold Support Shaft	6526	Side Cover
3309	Line Roller Screw	6329	Bearing Spacer	6527	Side Cover Flange
3366	Anti-Reverse Lever Screw	6330	Line Roller Bushing	6528	Rear Protector
3402	Protector Screw (small)	6331	Line Roller Spacer	6529	Side Cover Screw (medium)
3414	Drag Knob	6332	Line Roller Washer	6530	Worm Shaft Retainer
3503	Spool Washer	6353	Bail Spring Guide (A)	6531	Oscillating Guide
4150	Rear Protector Screw	6354	Bail Spring	6532	Anti-Reverse Lever
4421	Handle Screw Cap	6355	Bail Spring Guide (B)	6533	Body
4652	Lever Spring Guide (B)	6358	Rotor Protector	6534	Handle Assembly
4653	Lever Spring	6359	Bail Trip Lever	7274	Pinion Gear