



# STRADIC X 4000GTM 01

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	4838	Drive Gear Bushing	6330	Line Roller Bushing
0041	Drive Gear Washer	5222	Idle Gear Lock	6331	Line Roller Spacer
0050	Anti-Reverse Lever Screw	5253	Oscillating Guide	6332	Line Roller Washer
0071	Rotor Nut	5255	Worm Shaft	6353	Bail Spring Guide (A)
0589	Lever Hold Spring	5256	Idle Gear	6354	Bail Spring
0806	Bail Hold Support Screw	5257	Oscillating Guide Retainer	6355	Bail Spring Guide (B)
0930	Ball Bearing	5258	Anti-Reverse Lever	6359	Bail Trip Lever
1008	Handle Lock Washer	5261	Slider Retainer Screw	6442	Rotor Protector
1506	Clutch Cover Screw	5262	Oscillating Slider Retainer	6483	Bail Hold Support Spacer
1520	Anti-Reverse Cam Spring	5263	Oscillating Slider	6515	Bail Spring Cover
2094	Spacer	5264	Eared Washer "Br"	6517	Bail Assembly
2298	Spacer	5266	Drag Washer "H" (cloth)	6525	Drive Gear
2346	Drag Washer "C" (cloth)	5269	Drag Washer "H" (blue)	6597	Side Cover Screw (small)
2347	Click Gear	5270	Eared Washer "B"	6606	Side Cover Screw (medium)
2348	Drag Washer "C" (blue)	5275	Hold Click Spring	6674	Bail Arm
2409	Worm Shaft Spacer	5276	Lever Click Gear	6739	Protector Screw (large)
2852	Handle Screw Lock	5277	Fightin' Pressure Screw Washer	6894	Oscillating Slider Bushing
3282	Roller Clutch Screw	5278	Fightin' Pressure Screw	6919	Roller Clutch Assembly
3306	Ball Bearing	5338	Drag Washer "C" (cloth)	6920	Spacer
3309	Line Roller Screw	5339	Drag Shaft (B)	6922	Worm Bushing
3436	Drag Programmer Screw	5340	Key Washer "A"	6924	Anti-Reverse Cam
3655	Protector Screw (small)	5341	Drag Coil Spring	6927	Rear Cover Screw (long)
4254	Rear Cover Screw (short)	5342	Drag Spring Washer	6932	Drag Shaft (A)
4362	Side Cover Screw (long)	5343	Pressure Screw	6935	Spool Assembly
4421	Handle Screw Cap	5344	Hold Click Spring Washer	6936	Match Spool Assembly
4470	Double Paddle Handle Assembly	5880	Nut Lock Screw	6937	Main Shaft
4652	Lever Spring Guide (B)	6077	Click Pin	6952	Rotor
4653	Lever Spring	6085	Line Roller	6953	Side Cover Assembly
4654	Lever Spring Guide (A)	6132	Friction Ring	6954	Body
4656	Trip Lever Spacer	6290	Rotor Nut Lock Plate	6956	Fightin' Drag II Lever
4678	Oscillating Pawl	6296	Click Spring	6957	Drag Programmer
4724	Ball Bearing	6307	Bail Hold Support Shaft	6958	Rear Cover
4749	Bail Arm Screw	6329	Bearing Spacer	7274	Pinion Gear