



SUSTAIN 1000FA 97

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0041	Drive Gear Washer	4639	Bail Spring Guide (A)	4667	Drive Gear
0930	Ball Bearing	4640	Bail Spring	4668	Side Cover
1008	Handle Lock Washer	4641	Bail Spring Guide (B)	4669	Side Cover Flange
1891	Cover Screw (large)	4643	Bail Arm Bushing	4670	Rear Shield
2110	Worm Shaft Retainer Screw	4644	Bail Arm	4671	Rear Protector
2254	Ball Bearing	4645	Bail Spring Cover	4672	Rear Protector Screw
2298	Spacer	4646	Bail Hold Support Guard	4673	Handle Screw Cap
2401	Ball Bearing	4647	Bail Hold Support Spacer	4674	Side Cover Screw
2404	"E" Lock	4649	Spacer	4675	Oscillating Pawl Cover Screw
2715	Rotor Nut	4650	Bail Hold Support Shaft	4676	Oscillating Pawl Cover
2852	Handle Screw Lock	4651	Rotor	4677	Oscillating Slider Bushing
3304	Bearing Spacer	4652	Lever Spring Guide (B)	4678	Oscillating Pawl
3306	Line Roller Bearing	4653	Lever Spring	4679	Oscillating Slider
3309	Line Roller Screw	4654	Lever Spring Guide (A)	4680	Slider Retainer Screw
3402	Bail Spring Cover Screw (small)	4655	Bail Trip Lever	4681	Oscillating Guide
3455	Spool Washer	4656	Trip Lever Spacer	4682	Worm Shaft Retainer Washer
3567	Bushing	4657	Roller Clutch Screw	4683	Worm Shaft Retainer
3571	Anti-Reverse Cam Screw	4658	Clutch Cover Screw	4684	"E" Lock
3639	Worm Shaft Retainer Spacer	4659	Roller Clutch Assembly	4685	Anti-Reverse Lever
4632	Drag Knob	4660	Pinion Gear	4686	Body
4633	Spool Assembly	4661	Anti-Reverse Cam Ring	4687	Handle Assembly
4634	Spool Support	4662	Anti-Reverse Cam	5350	Line Roller
4635	Main Shaft	4663	Anti-Reverse Cam Spring	5351	Bail Assembly
4636	Line Roller Bushing	4664	Worm Bushing	5541	Bail Arm Screw
4637	Line Roller Spacer	4665	Idle Gear		
4638	Line Roller Washer	4666	Worm Shaft		