



3000FE 97

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	4652	Lever Spring Guide (B)	4842	Oscillating Guide (A)
0041	Drive Gear Washer	4653	Lever Spring	4843	Oscillating Guide (B)
0071	Rotor Nut	4654	Lever Spring Guide (A)	4844	Worm Shaft Retainer
0787	Multi-Purpose Screw	4656	Trip Lever Spacer	4972	Bail Trip Lever
0930	Ball Bearing	4661	Anti-Reverse Cam Ring	4974	Idle Gear
1008	Handle Lock Washer	4675	Oscillating Pawl Cover Screw	4999	Line Roller Bushing
1506	Clutch Cover Screw	4677	Oscillating Slider Bushing	5000	Line Roller Collar
1520	Anti-Reverse Cam Spring	4678	Oscillating Pawl	5001	Line Roller Washer
1891	Multi-Purpose Screw	4698	Bail Spring Guide (A)	5013	Spool Assembly
2298	Spacer	4699	Bail Spring	5014	Bail Spring Cover
2309	Slider Retainer Screw	4700	Bail Spring Guide (B)	5015	Bail Hold Support Guard
2362	Spool Support	4702	Bail Arm Bushing	5016	Rotor
2404	"E" Lock	4704	Bail Spring Cover Screw (large)	5017	Pinion Gear
2852	Handle Screw Lock	4714	Roller Clutch Assembly	5018	Bushing
3309	Line Roller Screw	4733	Oscillating Pawl Cover	5019	Worm Shaft
3366	Anti-Reverse Lever Screw	4734	Oscillating Slider	5020	Side Cover Flange
3402	Bail Spring Cover Screw (small)	4803	Worm Shaft Spacer	5021	Drive Gear
3414	Drag Knob	4810	Rear Protector Screw	5022	Side Cover
3468	Rear Cover Screw (short)	4822	Main Shaft	5023	Body
3503	Spool Washer	4823	Bail Arm	5024	Rear Cover
4362	Side Cover Screw	4826	Bail Hold Support Spacer	5025	Rear Protector
4421	Handle Screw Cap	4829	Roller Clutch Screw	5026	Handle Assembly
4449	Anti-Reverse Lever	4832	Anti-Reverse Cam	5350	Line Roller
4631	Spacer	4833	Worm Bushing (front)	5362	Bail Assembly
4649	Spacer	4836	Worm Bushing (rear)	5542	Bail Arm Screw
4650	Bail Hold Support Shaft	4838	Drive Gear Bushing		