CALCUTTA 51 99

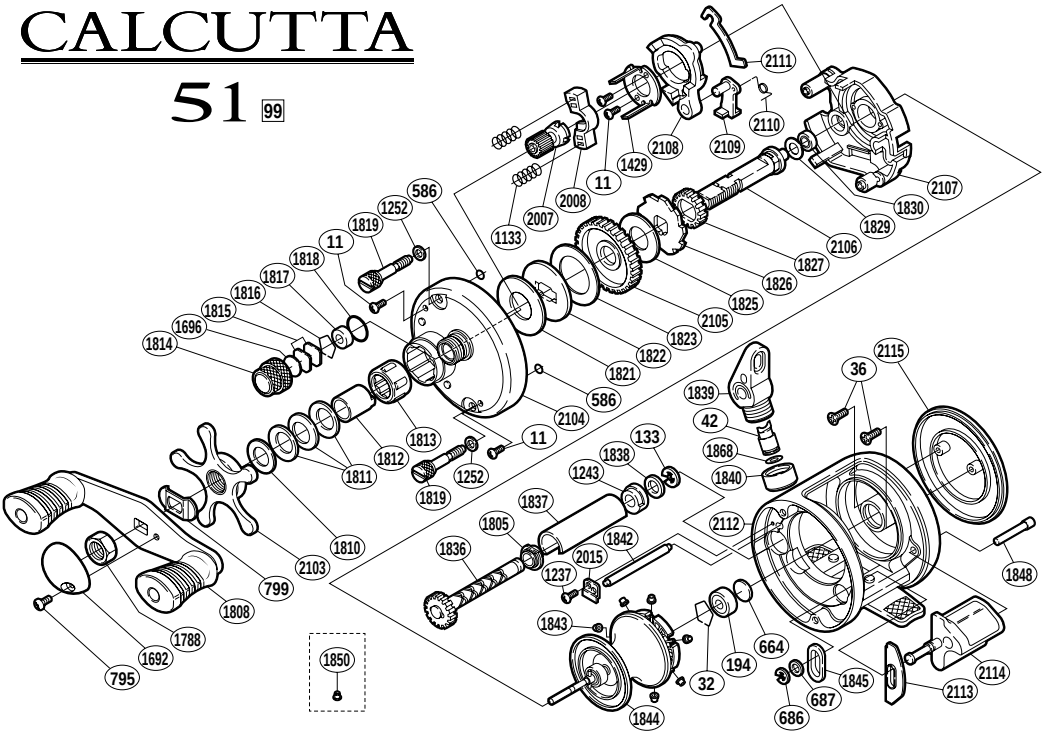

BNT No.	PARTS NAMES	BNT No.	PARTS NAMES	BNT No.	PARTS NAMES
0011	Multi-Purpose Screw	1811	Coned Disc Spring	1843	Brake Collar (blue)
0032	Bearing Retainer	1812	Roller Clutch Inner Tube	1844	Spool Assembly
0036	Right Side Plate Screw	1813	Roller Clutch Bearing	1845	Clutch Bar Guide (A)
0042	Line Guide Pawl	1814	Cast Control Cap	1848	Clutch Bar Support
0133	Worm Shaft Retainer	1815	Spool Tension Spacer	1868	Spacer
0194	Ball Bearing	1816	Bearing Retainer	2007	Pinion Gear
0586	Bolt Retainer	1817	Spool Shaft Bushing	2008	Yoke
0664	Spacer (B)	1818	“O” Ring	2015	Worm Bushing (A) Retainer
0686	“E” Lock	1819	Left Side Plate Bolt	2103	Star Drag
0687	Clutch Bar Support Spacer	1821	Drag Washer (D)	2104	Left Side Plate
0795	Handle Nut Plate Screw	1822	Key Washer (A-2)	2105	Drive Gear
0799	Friction Washer	1823	Drag Washer (A-2)	2106	Drive Shaft
1133	Yoke Spring	1825	Drag Washer (A-1)	2107	Set Plate
1237	Worm Bushing (A) Retainer Screw	1826	Anti-Reverse Ratchet	2108	Clutch Cam
1243	Worm Bushing (B)	1827	Idle Gear (A)	2109	Clutch Pawl
1252	Left Side Plate Bolt Washer	1829	Drive Shaft Spacer	2110	Clutch Pawl Spring
1429	Clutch Cam Retainer	1830	Ball Bearing	2111	Clutch Plate
1692	Handle Nut Plate	1836	Worm Shaft	2112	Forged One-Piece Frame
1696	Cast Control Spacer (B)	1837	Level Wind Guard	2113	Clutch Bar Guide (B)
1788	Handle Nut	1838	Worm Shaft Spacer	2114	Quick-Fire Ⅱ Clutch Bar
1805	Worm Bushing (A)	1839	Line Guide	2115	Right Side Plate
1808	Handle Assembly	1840	Pawl Cap		
1810	Star Drag Spacer	1842	Level Wind Guide	1850	Brake Collar (yellow)

(101120)